


SOLENOID PACK WIRING

NOTE: Solenoid pack must be wired as shown to ensure proper and safe winch operation. The solenoid pack should be mounted in a convenient location on or close to the winch motor. **NOTE: The backing plate of the control pack must be grounded to the same body to which the winch motor is grounded.**

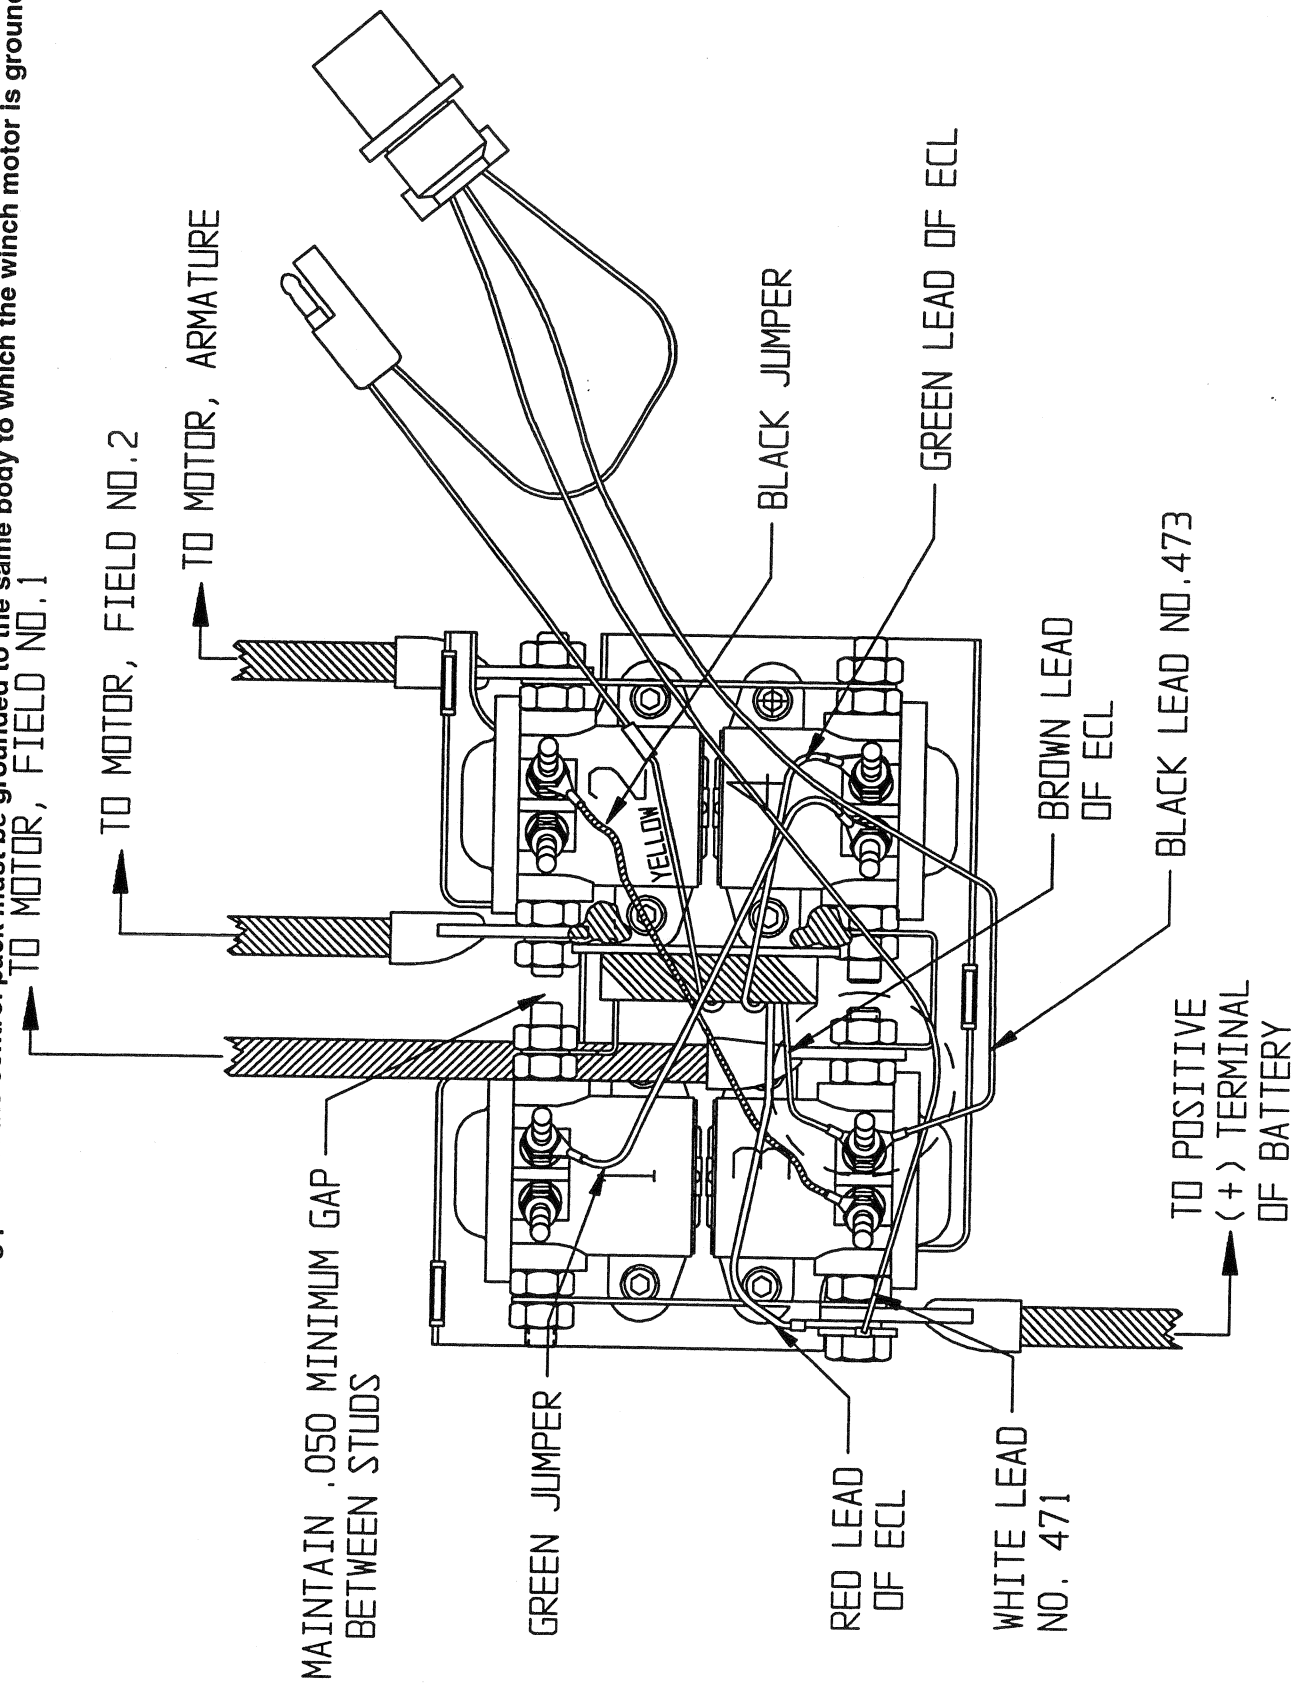

24 VOLT D.C.