


# How to remove the runflat from your Tire:

1. Remove the tire from the vehicle.
2. Deflate the tire.
3. Loose the 12 Bolts that hold the 2 prices of the rim together.
4. Remove the rim.
5. Remove the small rubber ring.
6. Put now dish soap over the runflat and the inside border of the tire.
7. Now compress the runflat:




8. Compress the runflat crosswise:

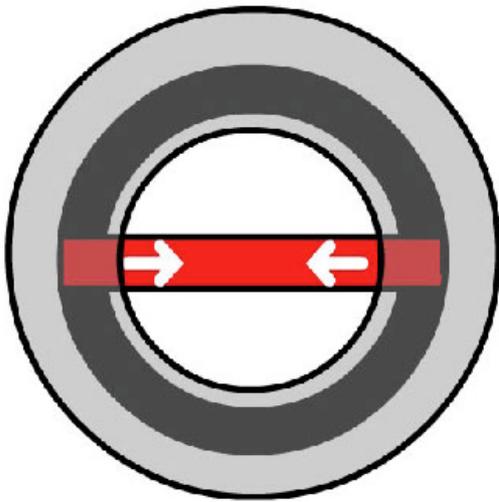


9. Now the runflat used to be come out a little bit.



10. Put a rod like shown in the picture thru the runflat and remove the last compressor you set. (Take dish soap to make the rod sliding through).

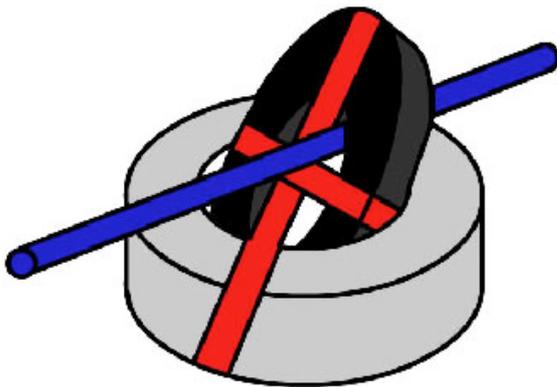

11. Now just pull the rod up and you got it.

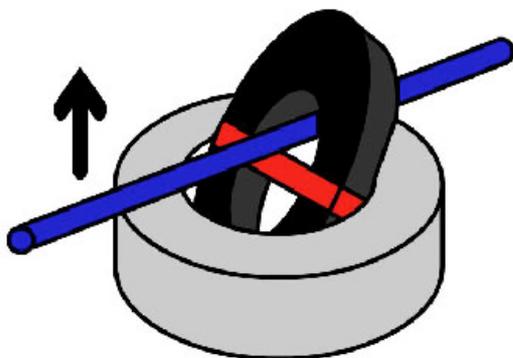

© by Student\_Driver ;-)